try new batteries. If problems persist, consult your warranty card for replacement instructions.

- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargable batteries.
- Remove any exhausted batteries from the game.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

6-MONTH LIMITED WARRANTY FOR USA

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 6 months from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 6-month warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

6-MONTH PRODUCT WARRANTY FOR UK

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

Distributed in the USA by:
RADICA USA Ltd.
13628-A Beta Road
Dallas, TX 75244-4510

US PRODUCT SUPPORT
1.800.803.9611
www.radicagames.com

WWW.RADICAGAMES.COM

Distributed in the UK by:
RADICA UK Ltd.
The Old Stables, Munns Farm,
Cole Green, Hertfordshire,
SG14 2NL, England

UK HELPLINE SUPPORT
0871 222 8278
Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm - 11 pm, Monday to Friday.

DER GRÜNE PUNKT

PLEASE RECYCLE

WWW.RADICAUK.COM

RADICA: ®

©2001 COPYRIGHT RADICA GAMES LTD.
ALL RIGHTS RESERVED

E 1

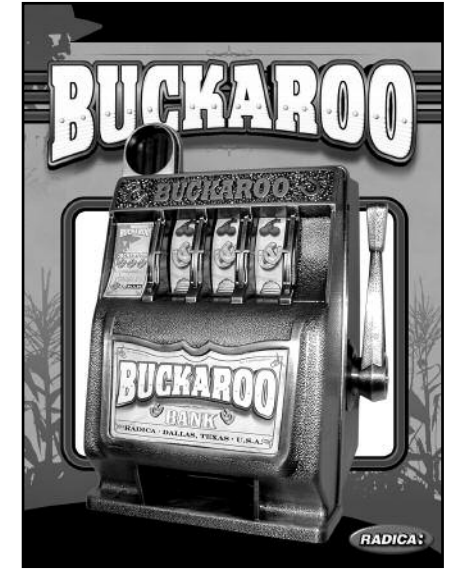

INSTRUCTION MANUAL

MODEL 630 P/N 82356830 Rev.A
For 1 player / Ages 8 and Up
Not a Gambling Device

INTRODUCTION

The RADICA BUCKAROO Savings Bank allows you to enjoy the fun and excitement of Las Vegas at home. Pull the lever and see the reels spin just like your favorite casino machines! Get a combination of any BAR or horseshoe across the reels and you win the Jackpot! When you hit a winner, the bell will sound and the jackpot will pay out automatically (if you have inserted coins in the Automatic Jackpot coin slot).

This Savings Bank has been designed to realistically imitate the sound, appearance and action of a real machine and does not require coins to operate.

PLEASE NOTE: This bank cannot be used as a gambling device.

INSTRUCTIONS

Batteries are required for the bell sound on a winning jackpot. See illustration on the back for battery installation instructions. Leave the batteries out if sound is not desired.

This bank accepts 95% of the World's coins. Coins inserted into the Savings Bank coin slot (top rear slot) will drop into a compartment in the back of the bank. Remove the Savings Bank door to collect any saved coins.

Coins inserted into the Automatic Jackpot coin slot (top front slot) will be released on any winning jackpot. The coins can be released at any time by pushing the manual release lever in the coin drop opening.

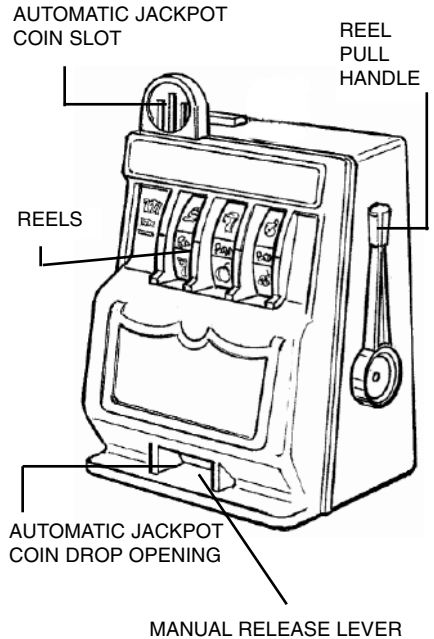

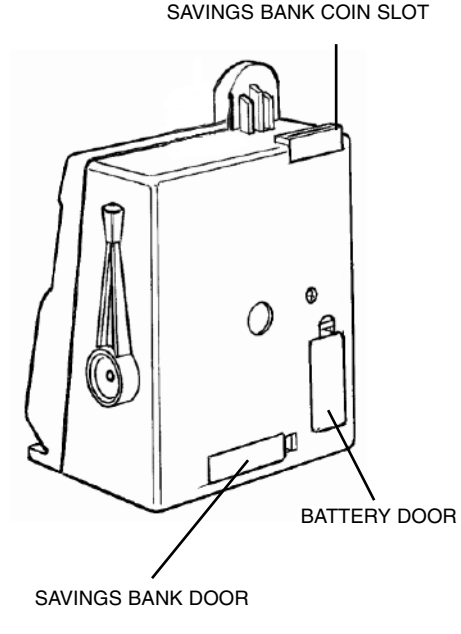

Spin the reels by using a smooth, gentle pull on the handle. Let go of the handle immediately after the mechanism releases. NEVER jerk or pull the handle in a rough manner.

Always wait for the reels to stop before pulling the handle. Always clear all the coins from the coin drop opening before pulling the handle again.

INSERTING THE BATTERIES

Remove the battery door by pressing the tab down. Insert two (2) 'C' (LR14) batteries (we recommend alkaline) with the correct battery polarity (+, -) and insert as illustrated below. Replace the battery door and close.

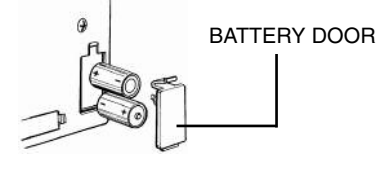

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- **As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**
- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **Under the environment with radio frequency interference, the sample may malfunction and require user to reset the sample.**

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or